



EUROSCOPE INSTALLATION INSTRUCTIONS


STEP 1 - Assembling track when Splicer is included

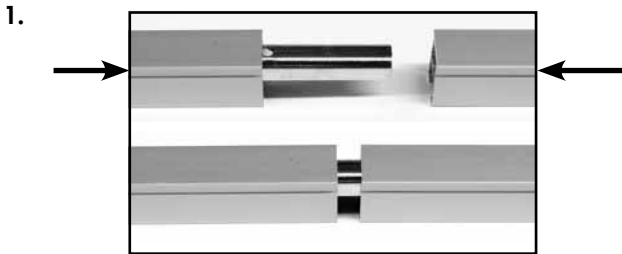

2. Center Support must be positioned on Splice for added strength.

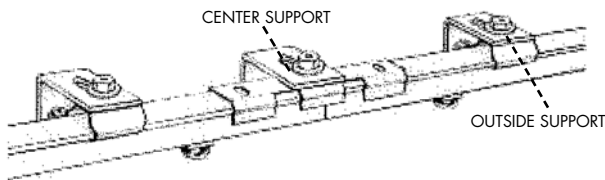


STEP 2 - Installing your supports

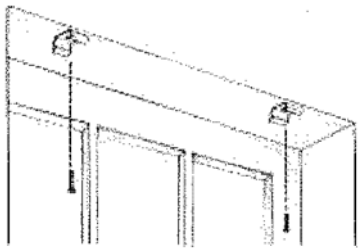


Step 2A. Inside mount

The outside Ceiling Clips should be installed 2" from the edge of the window frame. Space other Ceiling Clips equally between the outside clips. Ceiling Clips must be positioned in perfect alignment or the track will not install.

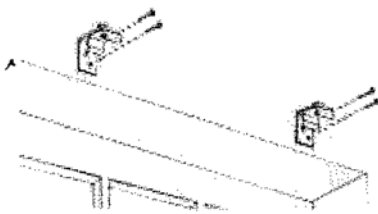

Step 2B. Outside mount


Center the track over the window opening at the desired height. Install the outside supports no more than 2" from the ends of the track. Make sure the supports are level.

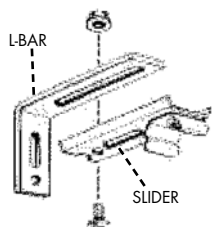

Step 2C. Extension supports


Install L-bars first, following the procedure of **Step 2B**. Attach Slider as shown in illustration.

STEP 3 - Installing the track

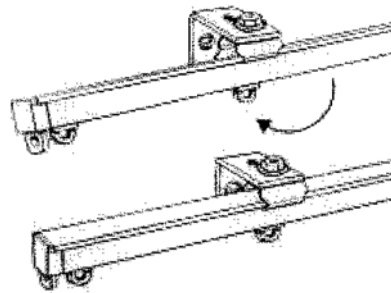

1. Place the front lip of the track into the front edge of the clip. Rotate the back of the track up into the clips and snap into place.

STEP 4 - Installing optional Fling Rod

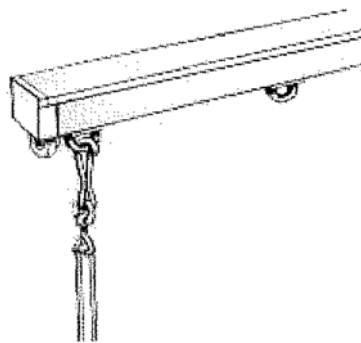

1. Place the Fling Rod on the side of the window you wish to operate from. Clip the Fling Rod into the end carrier.

2. USE PLASTIC PLUG TO LOCK FIRST CARRIER IN PLACE.

STEP 5 - Cord Draw Systems, Installing Pulley

1. Attach pulley to cord. Stretch pulley until cord is tight. It is not necessary to use excessive tension. Mark spot with pencil on wall or floor. Remove cords and install pulley then re-install cords.

• **THE PULLEY MUST BE INSTALLED. IT IS THE LAW. FAILURE TO DO SO CAN RESULT IN INJURY TO CHILDREN OR PETS!**

2. IF NEEDED - To adjust CONTROL cord drop, pull cord through master carrier until pulley is at desired height. Pull cord an extra few inches and knot cord at proper spot. When you install the pulley the cord will slide back into place.

